



	CE1	CS2	CS1	IC	OC
Codigos de recambio Spare codes	CE02	C22	C30	AZ3	CS970

	PT	R	T1	T2	CE2
Codigos de recambio Spare codes	PT21	R20	T922	T25A	CT8