



	CE1	CS	CS1	CS2	IC	OC
Codigos de recambio Spare codes	CE02	C22	C23	C11N	AZ3	CS970
	PT	R	CE3	T1	T2	CE2
Codigos de recambio Spare codes	PT21	R20	RF25	T925/04	T25A	CT8