
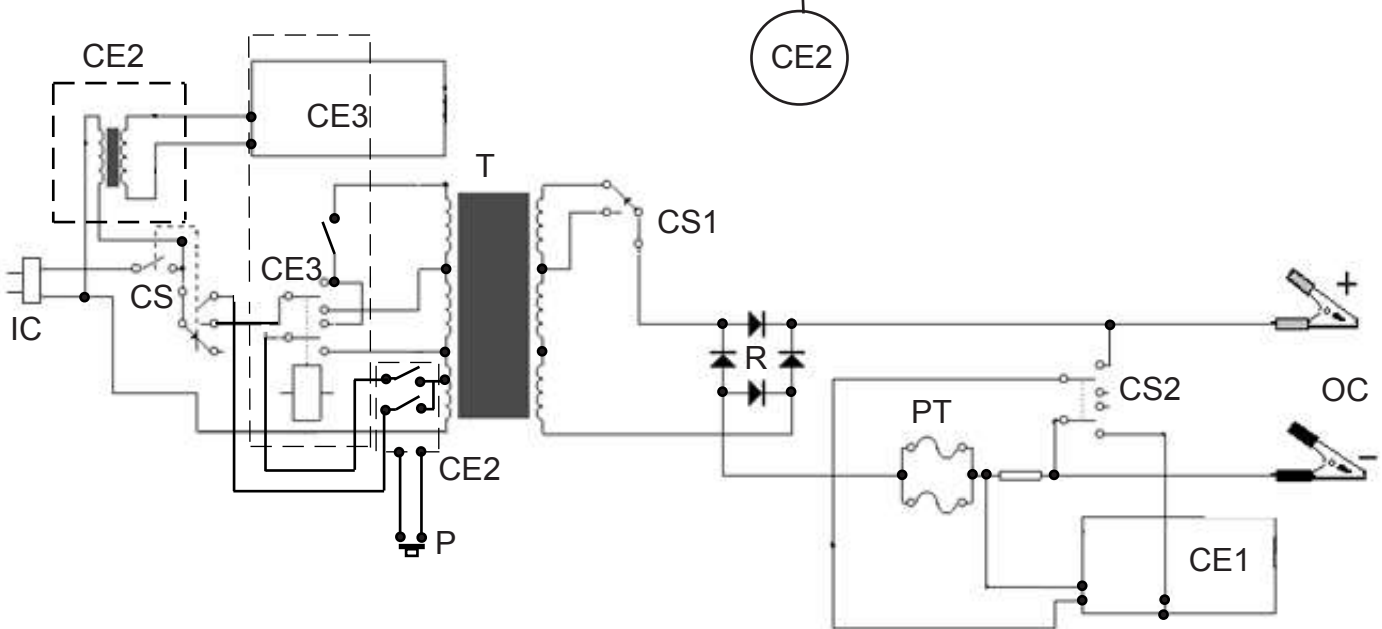


F-970

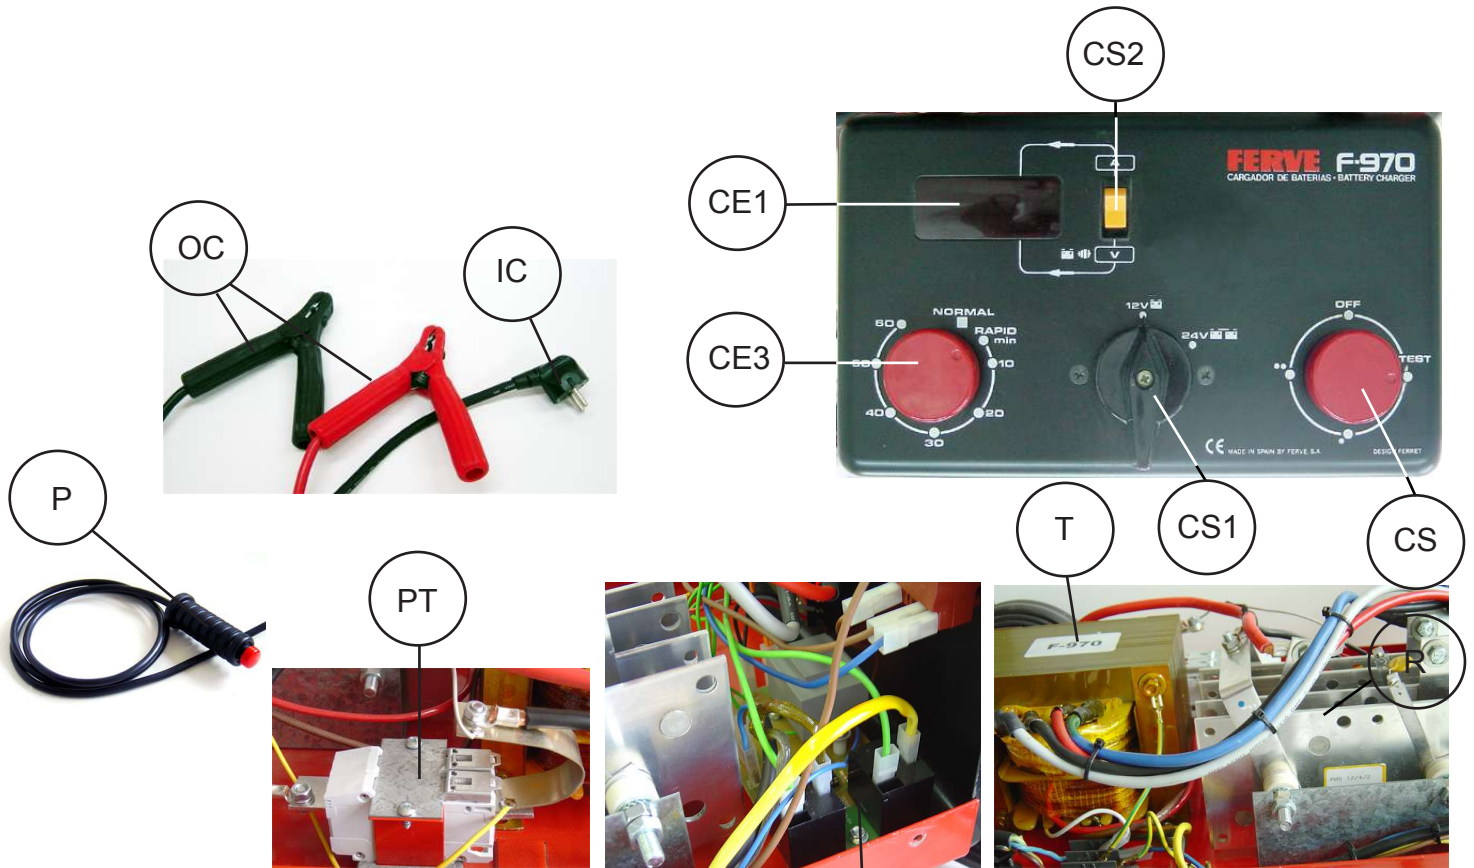

	CE1	CE2	CS	CS1	CS2	IC
Codigos de recambio Spare codes	CE02	CE970	C22	C23	C11N	AZ3
	OC	P	PT	R	T	CE3
Codigos de recambio Spare codes	CS970	P8	PT26	R22	T970/04	CT8