



| | | | | | | |
|--|-------|-------|------|-------|------|-----|
| | CE1 | CS | IC | OC | PT | R |
| Codigos de recambio Spare codes | CE990 | CO990 | AZ3 | CS990 | PT21 | R22 |
| | CE2 | T1 | T2 | T3 | V | |
| Codigos de recambio Spare codes | RF26 | T990 | T805 | TCE9 | V4 | |