
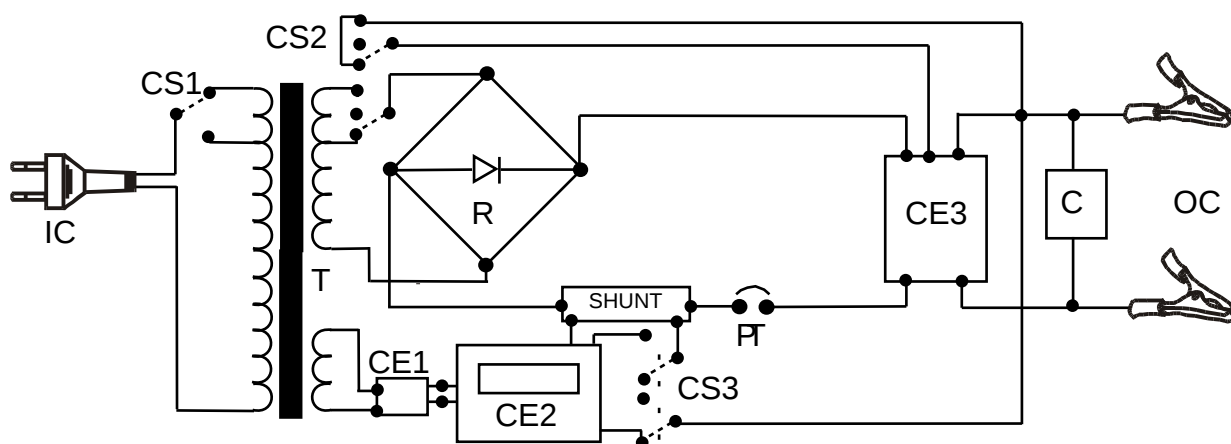
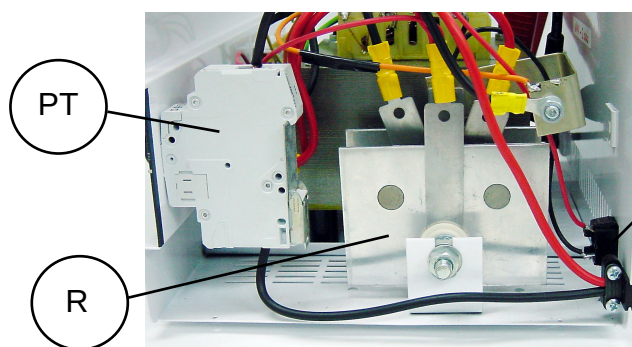


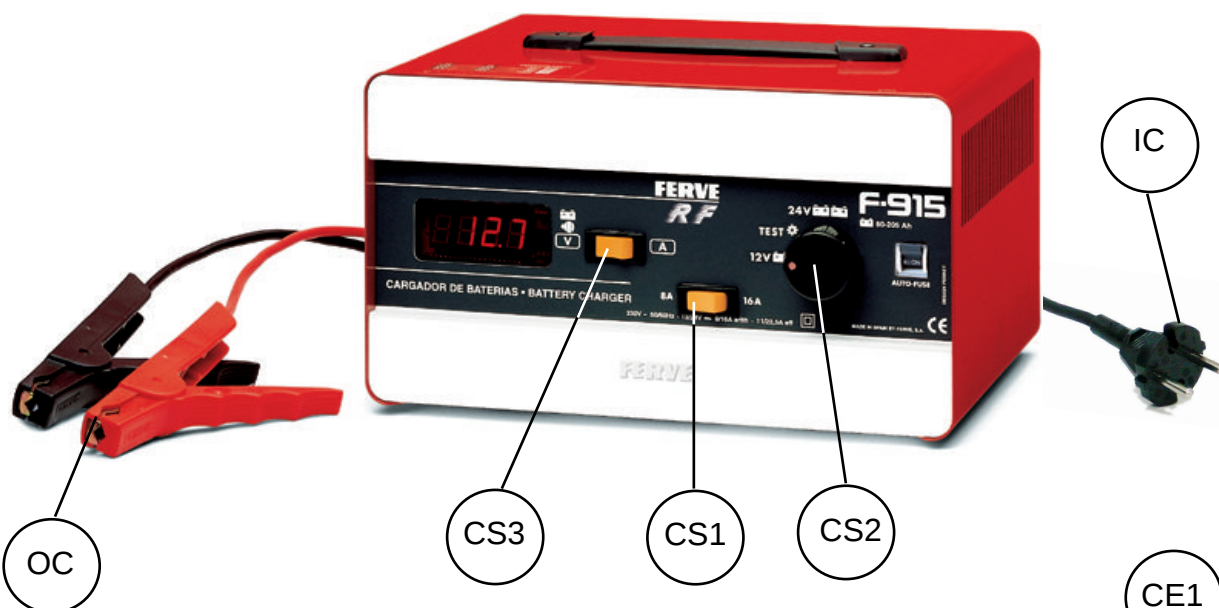

	C	CE1	CE2	CE3	CS1	CS2
Codigos de recambio Spare codes	C1	CE915	CE02	CE812RF	C30	C16

	CS3	IC	OC	PT	R	T
Codigos de recambio Spare codes	C11N	DK3	CS811	PT20	R35	T915/97