


CE

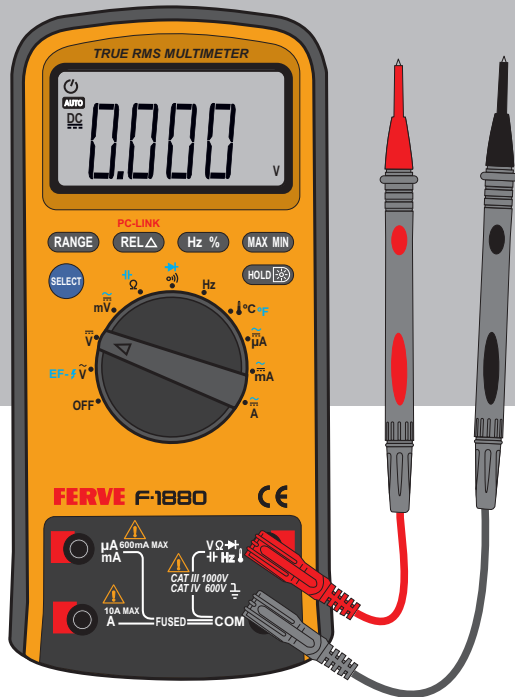

FERVE

F-1880

MULTIMETER



E PRECAUCIONES

GB PRECAUTIONS

F PRÉCAUTIONS

D VORSICHTSMASSNAHMEN

NL WAARSCHUWINGEN





E CONTENIDO

GB CONTENT


F CONTENU


D INHALT


NL INHOUD

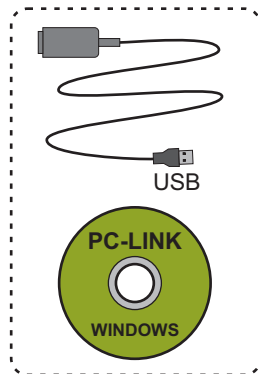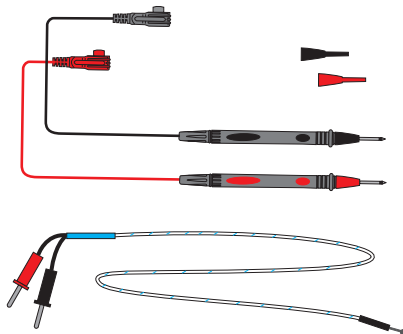





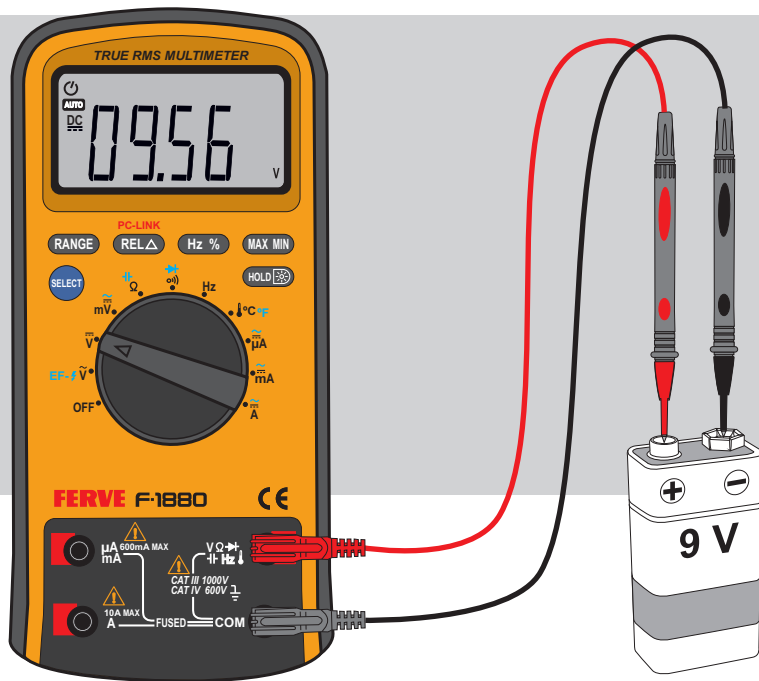


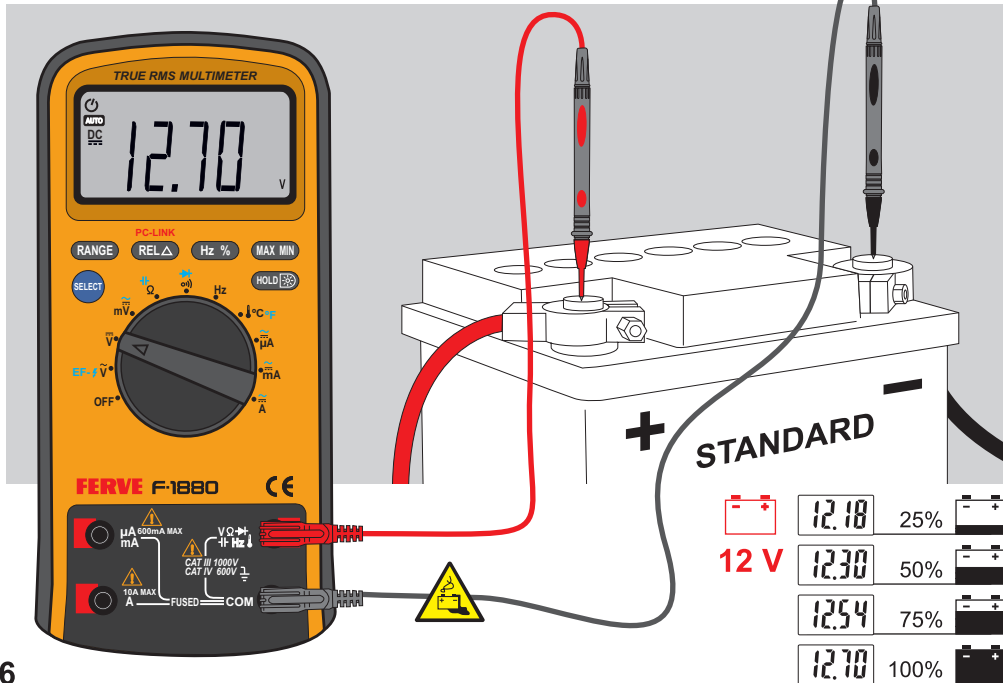

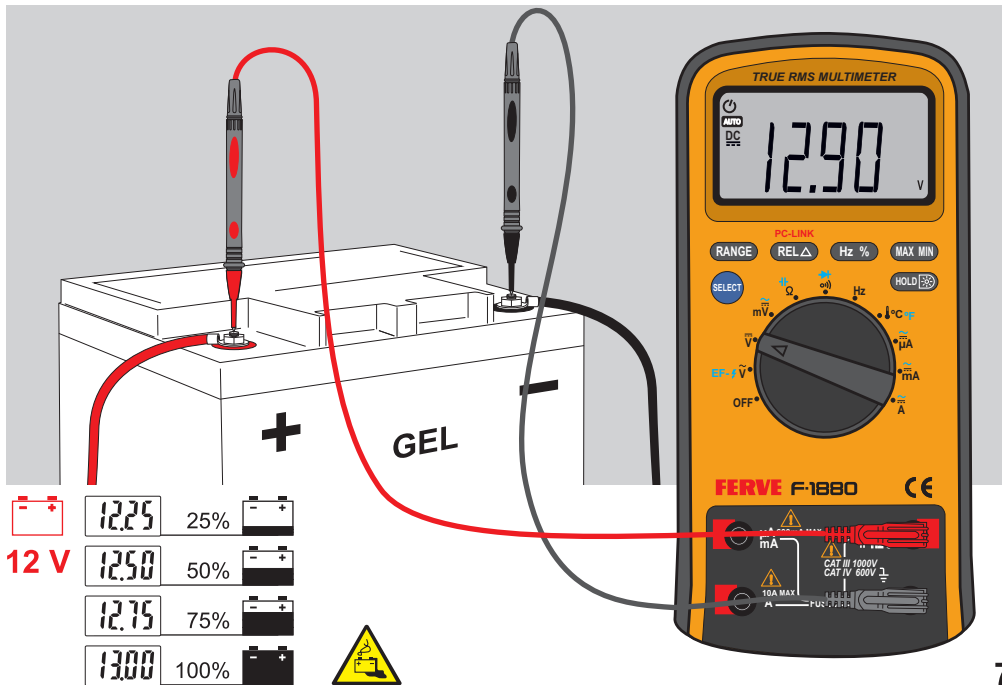

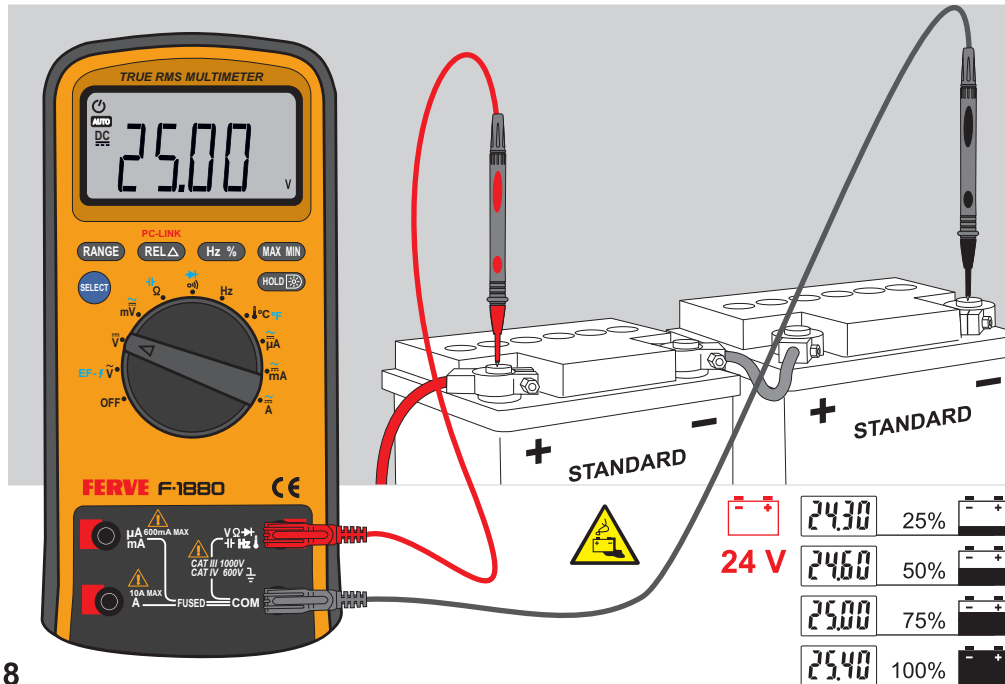

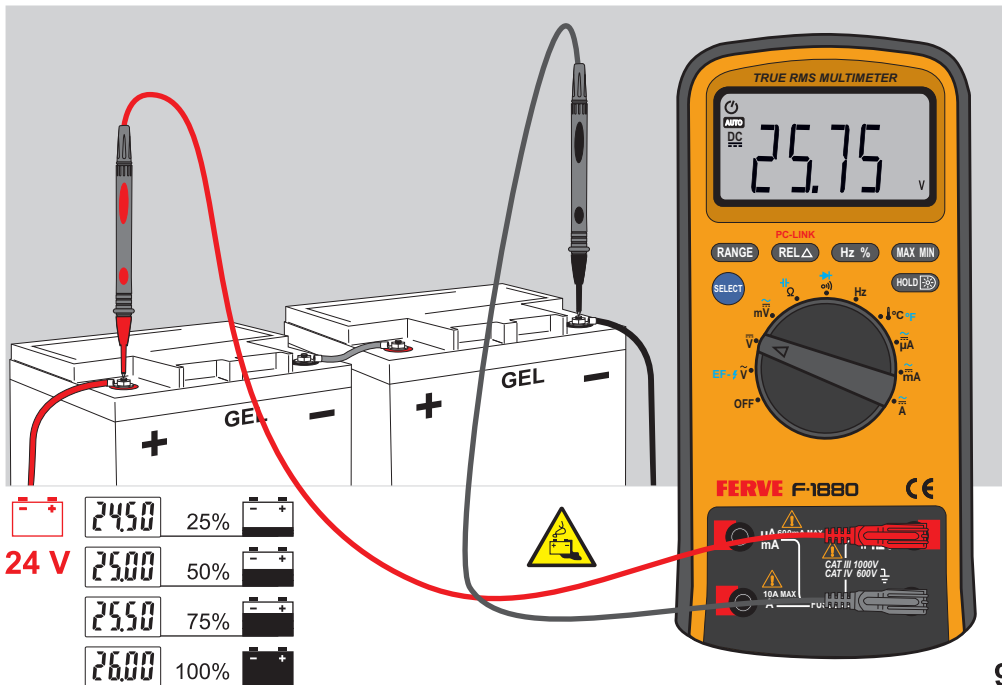

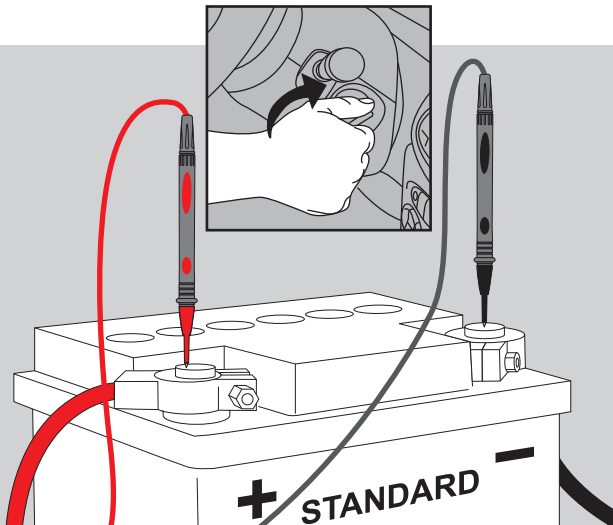



<13,30

13,30 / 14,80

>14,80




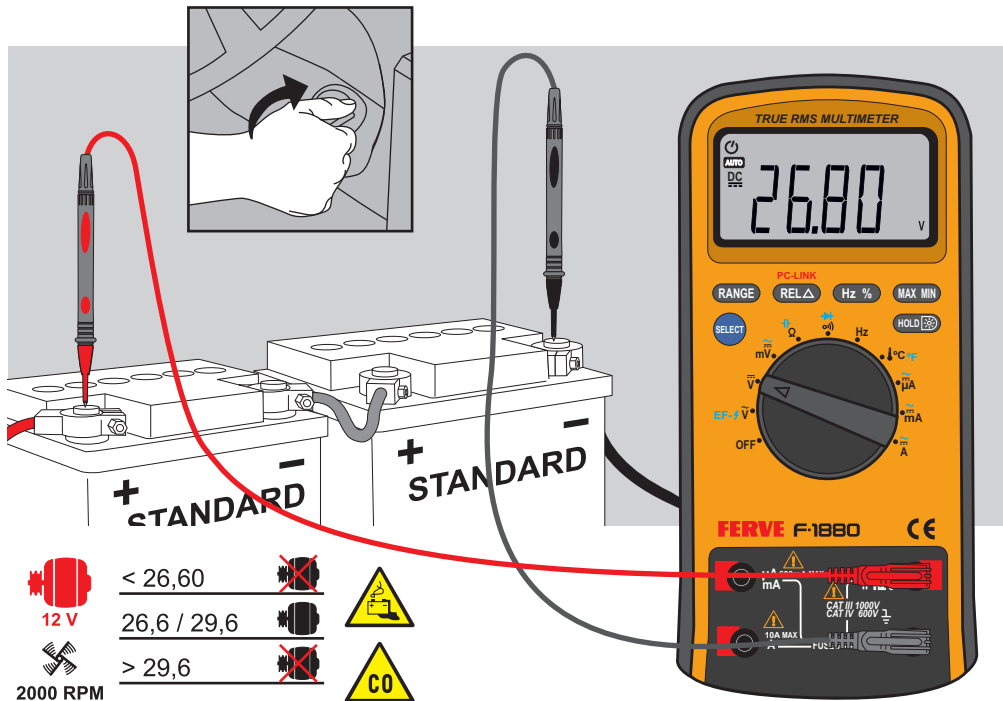


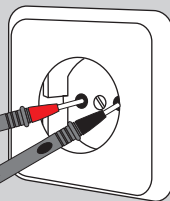




230 V~




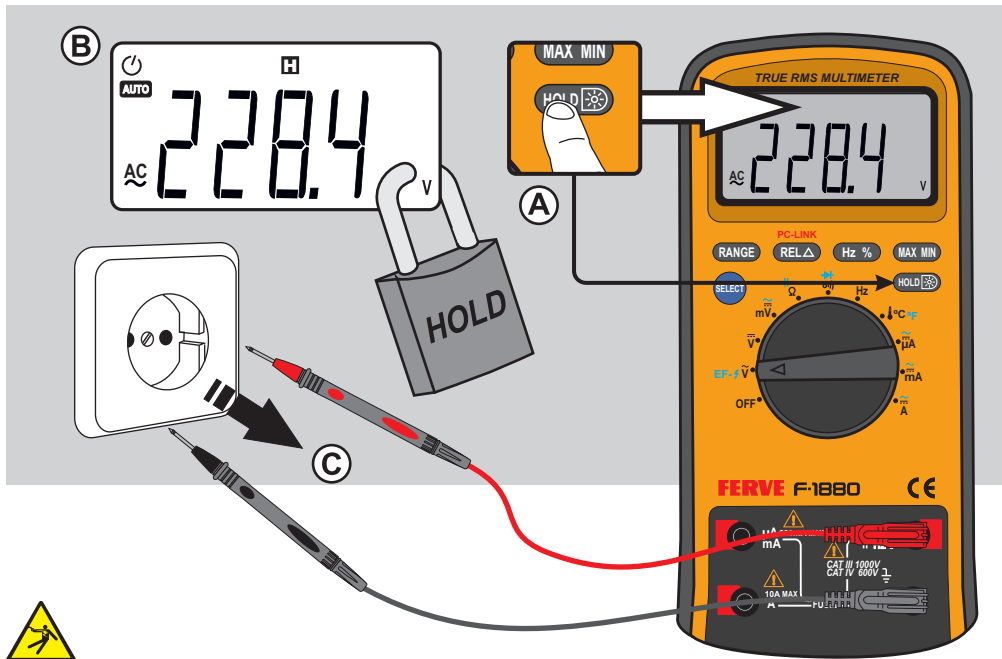


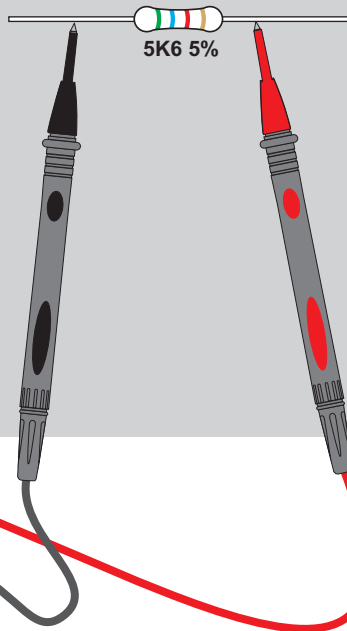


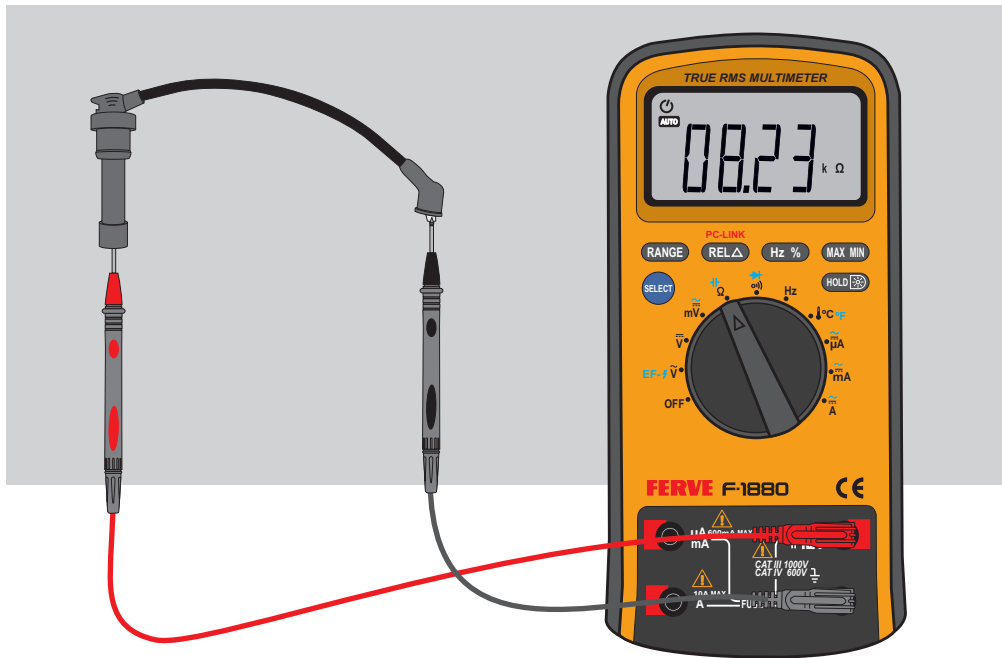

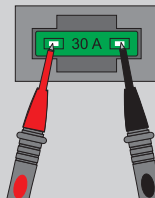

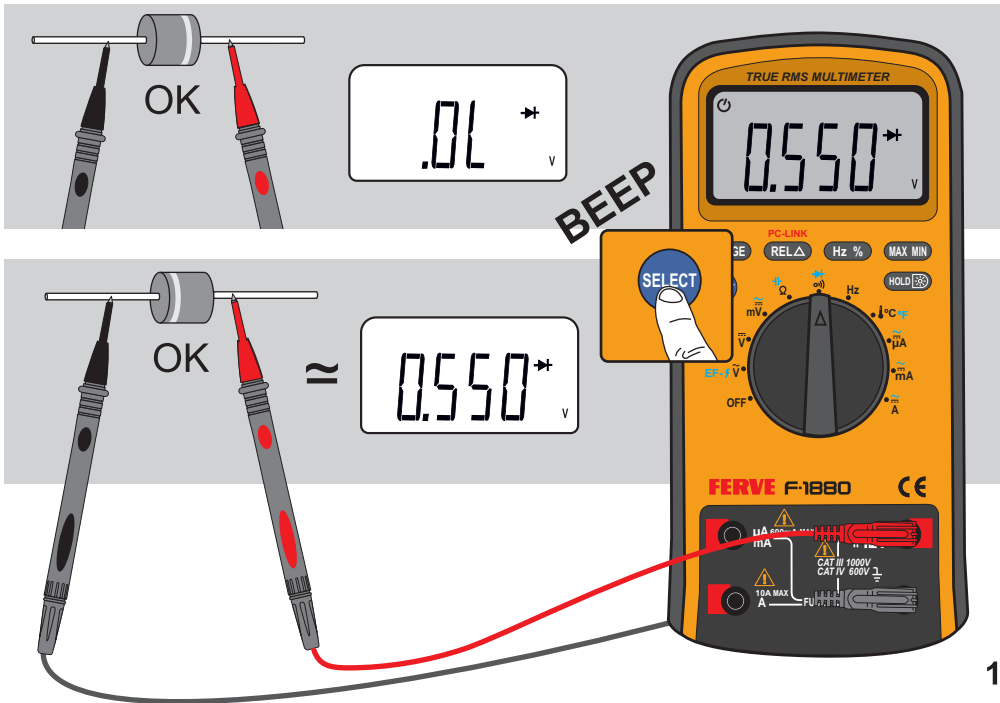


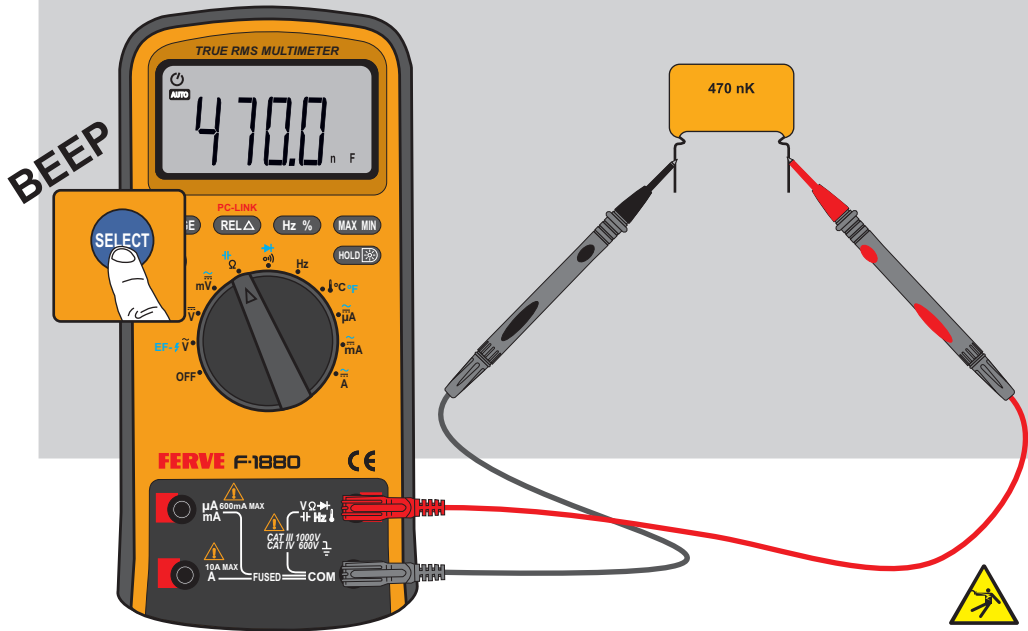


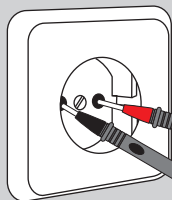


230 V~
50 Hz



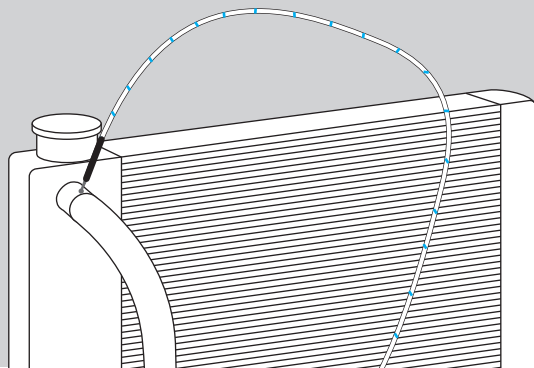

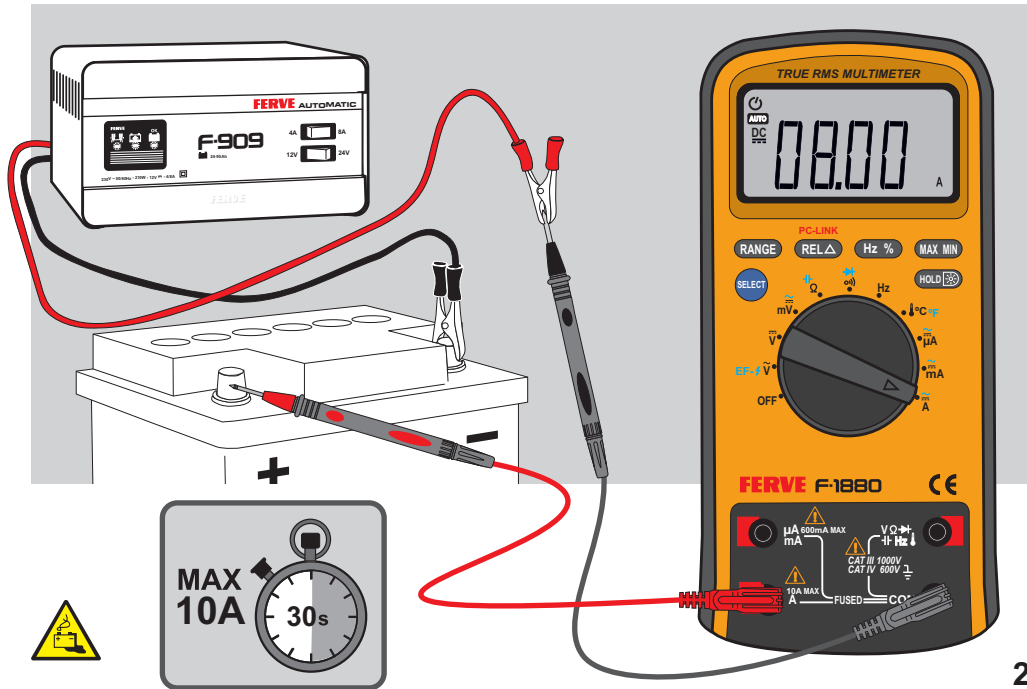

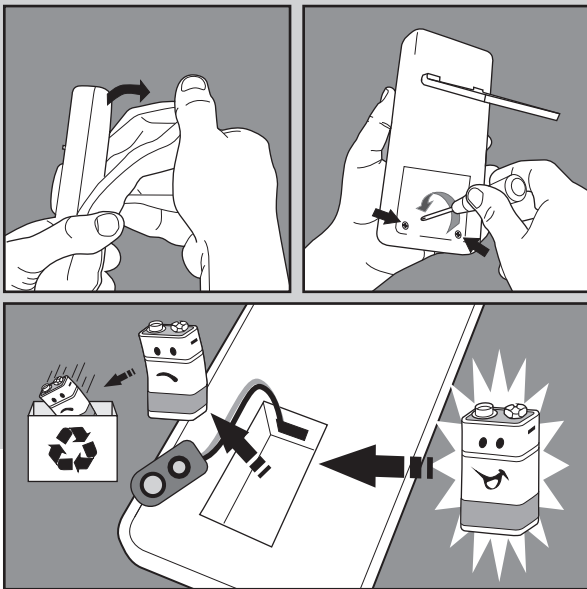

DC VOLTAGE / TENSIÓN DC (Autoranging/Autorrango)

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
600mV	0.1mV	±(0.8% of rdg + 5 digits)
6V	1mV	
60V	10mV	
600V	100mV	
1000V	1V	±(1.0% of rdg + 2 digits)

AC VOLTAGE / TENSIÓN AC (Autoranging/Autorrango)

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
600mV	0.1mV	±(1.0% of rdg + 5 digits)
6V	1mV	
60V	10mV	
600V	100mV	
1000V	1V	±(1.5% of rdg + 5 digits)

RESISTANCE / RESISTENCIA (Autoranging/Autorrango)

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
600.0Ω	0.1Ω	±(0.5% of rdg + 3 digits)
6.000kΩ	1Ω	±(0.5% of rdg + 2 digits)
60.00kΩ	10Ω	
600.0kΩ	100Ω	
6.000MΩ	1kΩ	
60.00MΩ	10kΩ	±(1.5% of rdg + 5 digits)

DC CURRENT / INTENSIDAD DC

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
600μA	0.1μA	±(1.5% of rdg + 3 digits)
6000μA	1μA	
60mA	0.01mA	±(1.5% of rdg + 3 digits)
600mA	0.1mA	
6A	1mA	±(1.5% of rdg + 5 digits)
10A	10mA	

AC CURRENT / INTENSIDAD AC

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
600μA	0.1μA	±(1.8% of rdg + 5 digits)
6000μA	1μA	
60mA	0.01mA	±(1.8% of rdg + 5 digits)
600mA	0.1mA	
6A	1mA	±(3% of rdg + 8 digits)
10A	10mA	

CAPACITANCE / MEDIDAS DE CAPACIDAD (Autoranging/Autorrango)

Ranges/Rangos	Resolution / Resolución	Accuracy/Precisión
60nF	10pF	<10nF: ±[5.0% of (rdg - 50 digits) + 20 digits] ±(3% of rdg + 10 digits)
600nF	100pF	±(5.0% of rdg + 10 digits)
6μF	1nF	
60μF	10nF	
300μF	100nF	

FREQUENCY / FRECUENCIA (1Hz~1MHz)

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
99.99Hz	0.01Hz	±(0.1% of rdg + 3 digits)
999.9Hz	0.1Hz	
9.999kHz	0.001kHz	
99.99kHz	0.01kHz	
999.9kHz	0.1kHz	

FREQUENCY / FRECUENCIA (6Hz~10kHz)

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
99.99Hz	0.01Hz	±(0.05% of rdg + 8 digits)
999.9Hz	0.1Hz	
9.999kHz	0.001kHz	
Above accuracies can be guaranteed within 10%~100% of the full range		

TEMPERATURE / TEMPERATURA

Ranges/Rangos	Resolution/Resolución	Accuracy/Precisión
-55°C~0°C	0.1°C	±(5.0% of rdg + 4°C)
1°C~400°C		±(2.0% of rdg + 3°C)
401°C~1000°C	1°C	±2.0% of rdg

CONTINUITY / CONTINUIDAD

Ranges/Rangos	Resolution/Resolución	Test Condition
600Ω	0.1Ω	Open circuit voltage: approx. 0.5V

DIODE TEST / PRUEBA DIODO

Test current / Intensidad test	Resolution / Resolución	Test Condition
1V	0.001V	Forward DC current approx. 1mA. Reversed DC voltage approx. 1.5V

E GARANTÍA

FERVE garantiza este aparato contra todo defecto de fabricación o de las piezas durante un período de 36 meses a partir de la fecha de compra, excepto consumibles tales como baterías y pilas. Quedan excluidos los daños provocados por errores de manejo, suciedad, conexión o energía inadecuada, accidentes y en general aquellos que provengan de causas externas al aparato. Cualquier otra prestación comprometida por el distribuidor será de la exclusiva responsabilidad del mismo. El presente documento tampoco cubre los deterioros ocasionados a otros bienes como consecuencia de un defecto del aparato garantizado. Esta garantía solamente tendrá validez acompañada de la factura de compra original o el recibo del establecimiento. Esta garantía perderá su vigencia cuando el aparato sea manipulado por personal o talleres ajenos a nuestros servicios técnicos.

GB WARRANTY

FERVE warrants this device against all-defective or faulty manufacturing or parts for a period of 36 months as of the purchase date, except consumables such as batteries. This warranty excludes damages caused by mishandling, dirt and filth, improper connection or power, accidents and, in general, any damages arising from causes that are external to the device. Any other warranty performance agreed to by the distributor shall be the exclusive liability of this party. Furthermore, this document does not cover wear or damage caused to other goods or assets as a result of a fault in the device under warranty. This warranty is only valid when accompanied by the original invoice or sales receipt. This warranty shall lose validity if the device is handled by personnel or shops not related to our technical service.



**DECLARACIÓN DE CONFORMIDAD
DECLARATION OF CONFORMITY
DÉCLARATION DE CONFORMITÉ
KONFORMITÄTSERKLÄRUNG
CONFORMITEITSVERKLARING
DECLARAÇÃO DE CONFORMIDADE**

Nosotros, *We, Nous, Wir, Wij, Nós*

FERVE, S.A.

declaramos, bajo nuestra única responsabilidad, que el producto
declare, under our sole responsibility, that the product
déclarons, sur notre seule responsabilité, que le produit
erklären, in alleiniger Verantwortung, dass das Produkt
verklaren, onder onze eigen verantwoordelijkheid, dat de producten
Declaramos, sob nossa única e exclusiva responsabilidade, que o produto

***Multímetro digital / Digital multimeter / Multimètre numérique
Digitales Universal- Mesgerät / Digitale Multimeter / Multímetro digital***

F-1880

al cual esta declaración se refiere, es conforme a las siguientes normas:
to which this declaration relates, is in conformity with the following standards:
auquel se réfère cette déclaration, est conforme à les normes :
auf das sich diese Erklärung bezieht, mit den folgenden Normen:
waar deze verklaring zich op richt, in overeenstemming is met de volgende normen:
a que se refere esta declaração, cumprem com as disposições das seguintes normativas:

**IEC62321:2008, IEC 62321-4:2013, IEC 62321-5:2013, IEC 62321-6:2015,
IEC 62321-7-1:2015, CTC19080343RR**

según las disposiciones de la Directiva:
following the provisions of Directive:
conformement aux dispositions de Directive :
Gemäss den Bestimmungen der Richtlinie:
volgens de richtlijn:
em conformidade com o disposto na directiva:

2014/32/EU, 2014/30/EU

FERVE

FERVE, S.A

Ctra. de Calafell, 15-25 - Apartado (P.O. Box) 7
43700 El Vendrell (España)

www.ferve.com

2018801 - 0125